

**G SERIES:
GLOW IN THE DARK SIGNS**

PHOTO LUMINESCENT PIGMENTS ABSORB LIGHT AND SUBSEQUENTLY DISCHARGE WITH A BRILLIANT GLOW, FOR SAFETY IN THE EVENT OF POWER FAILURE.



XF86AG/820
450 x 150mm **G**



XF86AG/822
450 x 150mm **G**



XF86AG/823
450 x 150mm **G**



XF86AG/837
450 x 150mm **G**



XF86AG/838
450 x 150mm **G**



XW86AG/600
450 x 150mm **G**



XW86AG/588
450 x 150mm **G**



XW86AG/601
450 x 150mm **G**



A
FPA 944
200 x 200 mm

PC
FPC 944
200 x 200 mm **C** **R**

PENALTY \$1000

VICTORIA

THIS SIGN IS RECOMMENDED TO BE INSTALLED WITHIN THE STAIRWELL, AT EACH LEVEL OF A FIRE STAIR AND ALSO, IN FIRE TUNNELS, WITHIN THE TUNNEL THE SIGNS SHOULD BE CONSPICUOUSLY PLACED NEAR EACH ACCESS POINT.
COPYRIGHT SAFETYMAN 2004

IT IS ESSENTIAL THAT EGRESS PATHS SHOULD BE KEPT CLEAR. WHILST IT IS MANDATORY TO ERECT SIGNS IN NSW AND THE ACT, OTHER STATES, SIMILARLY, DEMAND CLEAR PATHS. THESE SIGNS ARE USEFUL, PARTICULARLY IN MULTI-TENANT OCCUPANCIES SUCH AS SHOPPING CENTRES AND COMMERCIAL PREMISES.



XF86AG/903
450mm x 150mm **G**
XM93/R120
225 x 75mm **PC** *
* NOT PHOTO LUMINESCENT



XF46AG/811
600 x 150mm **G**




A
FPA 943
200 x 200 mm


PC
FPC 943
200 x 200 mm **C** **R**

QUEENSLAND

SIMILARLY, IT IS RECOMMENDED THAT THE SIGN BE INSTALLED WITHIN THE STAIRWELL, AT EACH LEVEL OF A FIRE STAIR AND ALSO, IN FIRE TUNNELS, WITHIN THE TUNNEL THE SIGNS SHOULD BE CONSPICUOUSLY PLACED NEAR EACH ACCESS POINT.
COPYRIGHT SAFETYMAN 2004

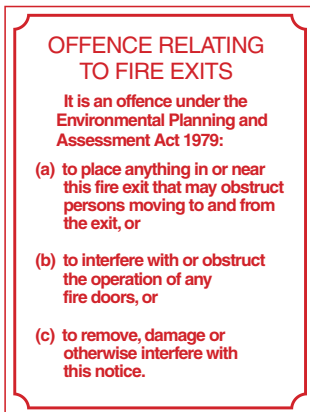

XF68A/939
150 mm x 200 mm **A**
XF68PC/939 **PC**

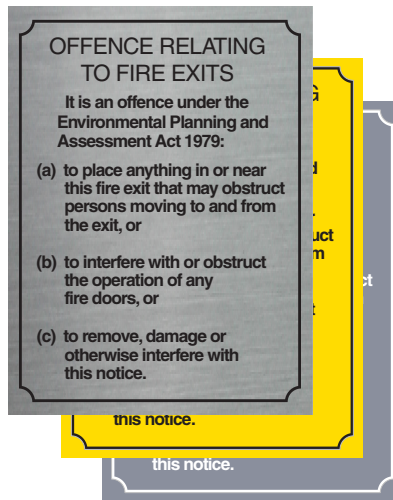


SILVER **PC** XF68PCS/939 **SILVER** **EP** FPG939S
GOLD **PC** XF68PCG/939 **CHARCOAL** **PC** XF68PCL/939

NSW

IN THIS STATE, THE REGULATIONS REQUIRE THE SIGN TO BE MOUNTED OUTSIDE THE STAIRWELL OR TUNNEL, ADJACENT TO EACH ACCESS DOORWAY. THE DOORWAY IS THE HOLE IN THE WALL AND ADJACENT, OF COURSE, MEANS CONTIGUOUS SO THAT BOTH THE DOOR AND THE SURROUNDING WALL ARE ADJACENT, MEANING THAT THEY CAN BE MOUNTED EITHER ON THE DOOR OR THE WALL.



XM63PC/666 150 x 75mm **PC**

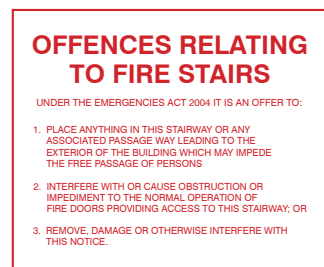

FPA942 **A**

ACT

HERE THE FIRE BRIGADE ACT REQUIRES A SIGN TO BE ERECTED IN EVERY FIRE ISOLATED STAIRWAY, IN A CONSPICUOUS POSITION, AT THE LANDING ON EACH STOREY LEVEL. UNLIKE NSW, THE SIGNS ARE WITHIN THE STAIRWELL.



XF86C/047 450 x 150mm **A**

THIS LARGER SIGN IS USED EXTERNALLY WHEN THERE IS CONCERN FOR OBSTRUCTION